


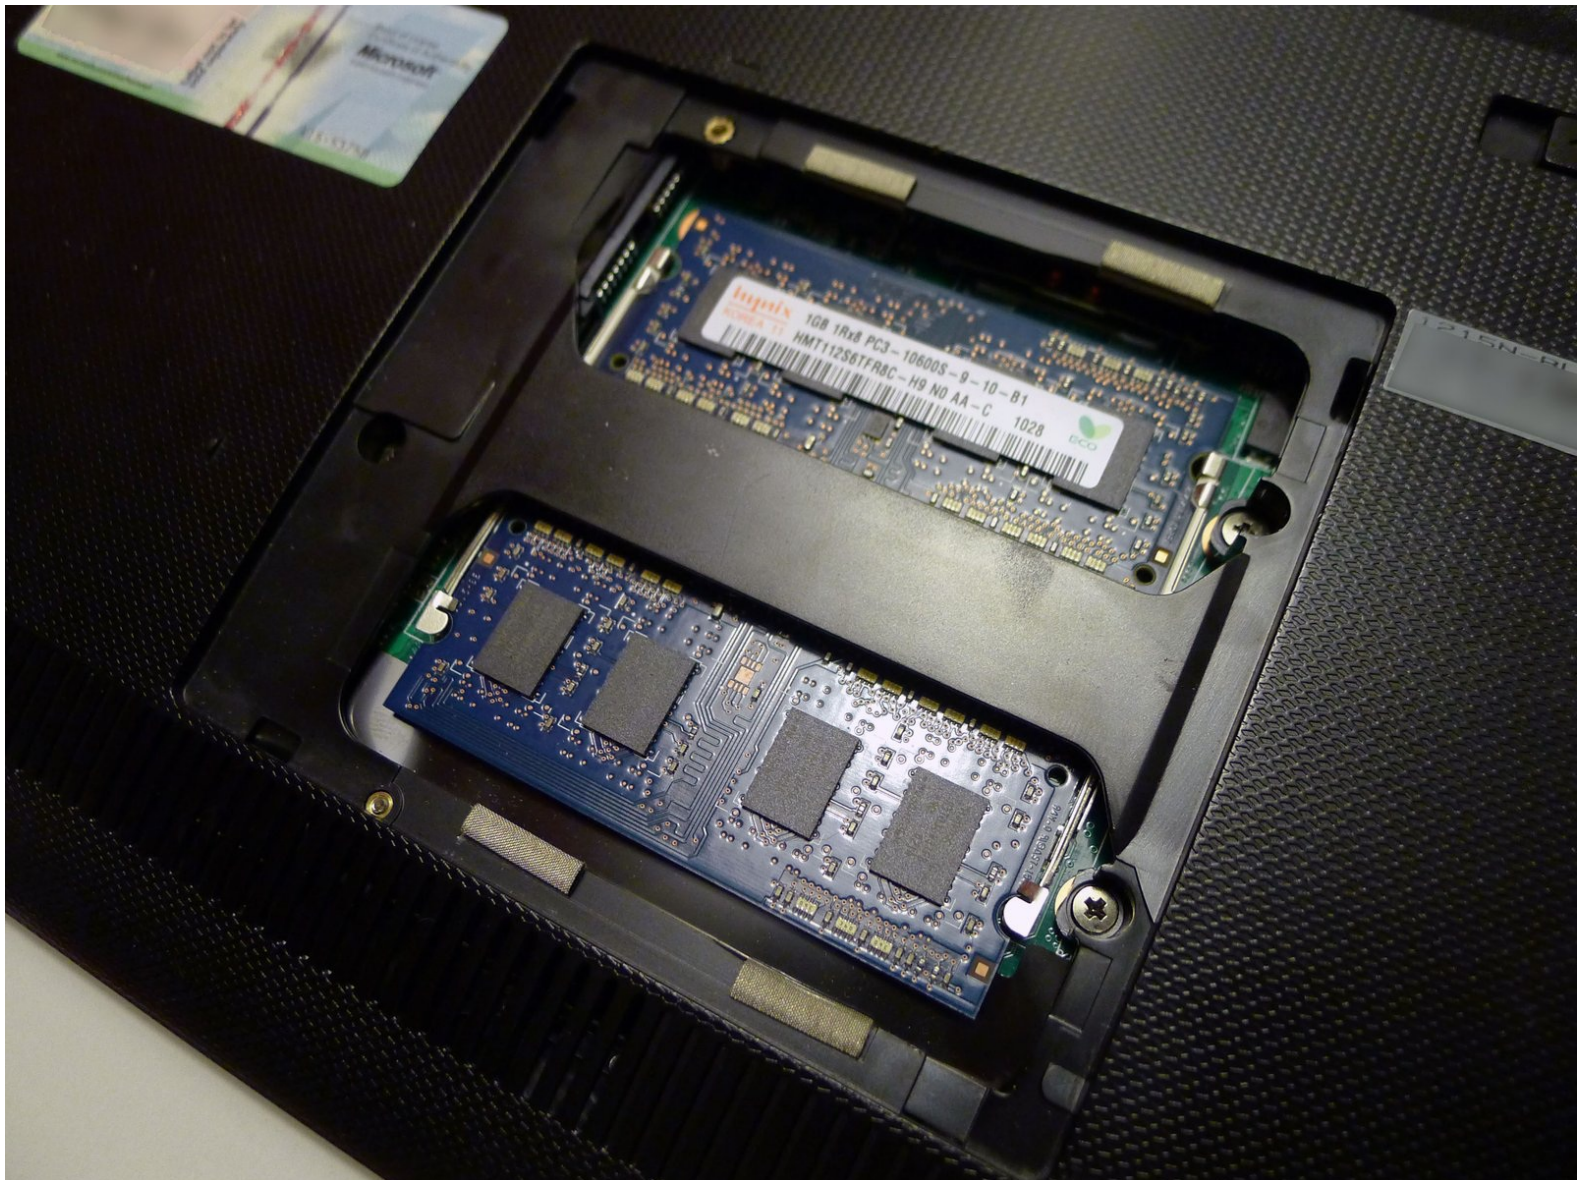

Asus Eee PC 1215N RAM Replacement

Get Access to the RAM compartment and RAM Module Removal/Installation

Written By: Gaetan





TOOLS:


- [Anti-Static Wrist Strap](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery




- Turn the power off and turn the netbook upside down.
- Slide both battery catches together to release the battery.
- Slide the battery out.

Step 2 — RAM

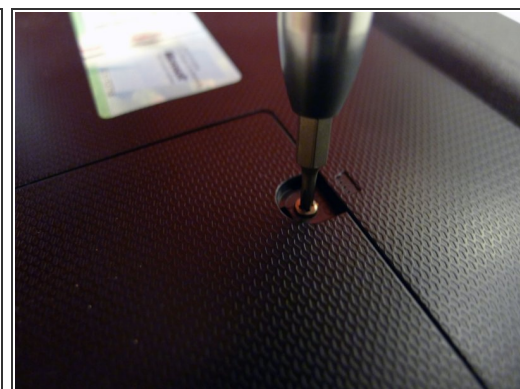


- Locate the memory compartment.
- Using a [Plastic Opening Tools](#), remove the screw rubber cover.
- Remove the screw.

Step 3

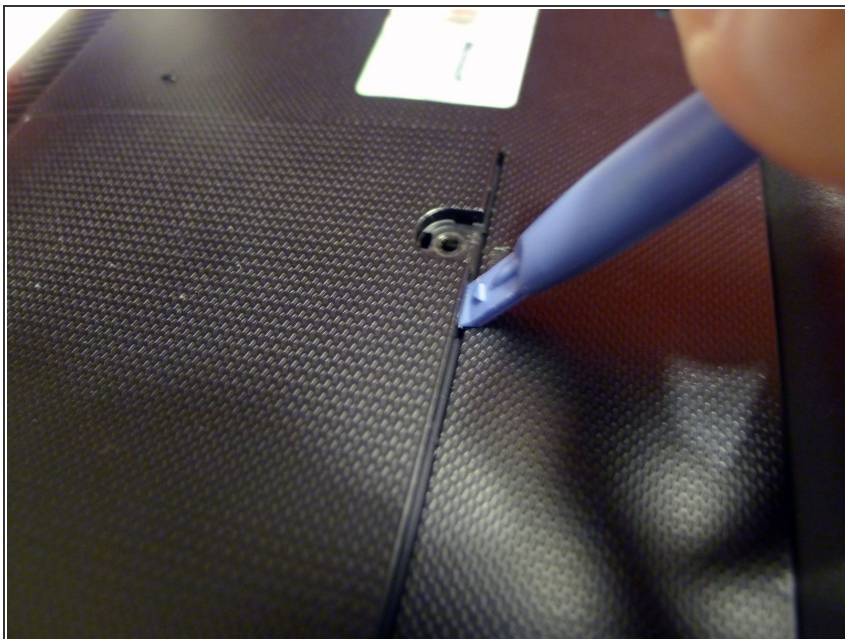

- Use a [Plastic Opening Tools](#) near the screw hole to release the cover.
- Remove the cover

Step 4

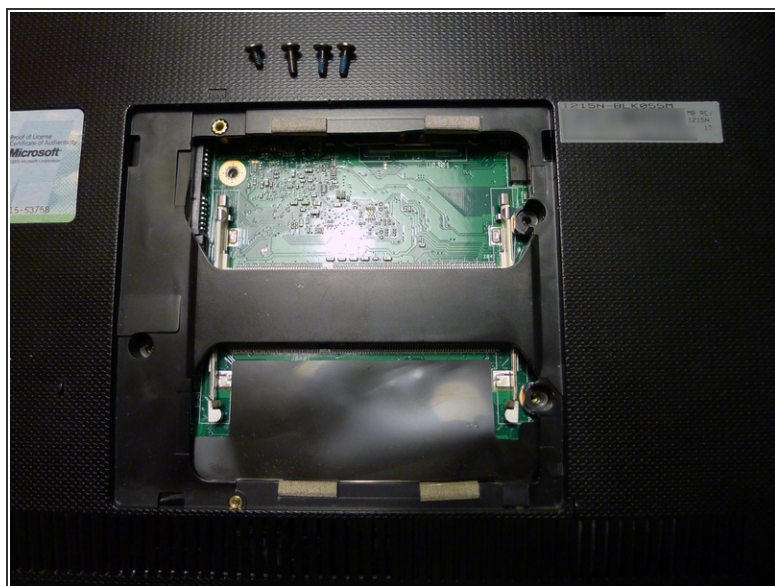

- Using a [Spudger](#), push both right and left metal clip to release one of the RAM module.
- Slide out the RAM module.
- Do the same with the second RAM module if necessary.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 02:30:50 PM.